


INSTRUCTIONS RIMO 2000

Congratulations on your RIMO 2000 Dimming and Switching System

You have purchased a high-quality product with a two-year full warranty excluding shipping costs

Left under : Connection main cable
Bottom right : On/off switch 220 v 50 Hz

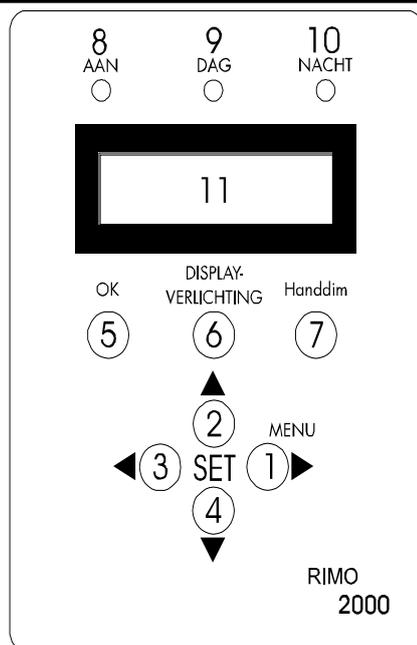

Menu Keys:

Scroll forward or backward through menu using button 1 or 3
Increase or decrease by means of buttons 2 or 4 and set to desired values
5 = OK (confirm) 6 = display lighting
7 = Manual dimming
8 = On 9 = Day 10 = Night

Lighting connection :

Front left socket for the dimmable beams
Front right socket for the fluorescent tubes

Indicator lights

ON: If device is turned on 8
DAY: Burns continuously is day program 9
Blinking is transition from day to night
NIGHT: Burns continuously is night program 10
Blinking is transition from night to day
DISPLAY : 11

CONNECT

Connect the clock to your power outlet with the supplied cable

Daylight plug (fluorescent tubes): in the right socket on the front of the RIMO 2000

Night light plug (dimmable halogen bulbs in the right socket on front of the RIMO 2000

Now turn on the clock with the switch (bottom). The DAY 8 indicator light will now light up. The display shows: RIMO 2000.

When the day light is on, the indicator light DAY 9 is on. When the night light is on, indicator light NACHT10 is on

The illumination of the display(11) is now also on. You can turn it on and off with the button "DISPLAY LIGHTING 6"

Note: To be able to dim properly, use dimmable halogen light bulbs!

SETTING THE CLOCK OF THE RIMO 2000

A. Setting the time:

Press the "menu" button 1 (Menu). If "SET CLOCK" appears in the display, press button 2 to move the hours forward or button 4 to reset the hours. Then press the "menu" button 1 again to set the minutes. Immediately afterwards, press the OK 5 (OK) button to record your setting.

Note: If you do not use the OK 5 button or wait too long to press, the time setting will not be recorded.

With all other settings you do not have to use the OK button but you can.

B. Setting the day lighting:

Press the menu button 1 (Menu) until the display 11 START DAGPGM appears . Now set the hour and minutes with the buttons 2 and 4 (see under A).

If you set the daytime lighting to 7.30 am, the dim lighting will rise from the minimum value (e.g. from 4 during the night) to the maximum value 31 and only then will the day lighting (TL's) turn on. Shortly after, the night lights will go out.

Rising from the weak dim lighting to the bright dim lighting takes ± 25 minutes and then the daytime lighting (TL's) will turn on in this example 07.55 hours. If you wish, you can turn off the fluorescent lighting (daytime lighting) separately. Press the menu button 1 (Menu) until it appears in the display "TL DAYTIME". By pressing the button 2 (forward) or 4 (back) you set the time to turn the day lights off and on (you can only set whole hours here). If you just want to keep the day light on, set "ON" and "OFF" to 00 with button 4

C. Setting the starting of the night lighting:

Press the "menu" button 1(Menu) as many times as possible until THE START NIGHTPGM display appears. Now set the hour and minutes with buttons 2 and 4 (see under A.). When the night lighting comes in, the day lighting turns off after a few seconds. The maximum value of the night lighting (e.g. 31) takes about 25 minutes to return to the minimum value you set (e.g. 4). (set this see under D).

D. Setting the strength of the dipped-beam lighting:

Press the button 1 (Menu) as many times as possible until DIM VALUES appear in the display

You can now use buttons 2 and 4 to increase or decrease the minimum value (e.g. 4) and the maximum value (e.g. 31).

From maximum value to set minimum value takes about 25 minutes.

E. Hand dimmer:

If you unexpectedly need more light in the evening to do something, you can get more light with the handdim button 7. The strength of this light

You can set it as follows: Press the menu button 1 until dim value appears in the MANUAL CONTROL display. With buttons 2 and 4

you can increase or decrease it

F. DELETING YOUR SETTINGS:

If you turn off your clock, all your settings are stored in your clock's memory.

You only need to replace the battery in your clock once every 10 years

If you want to erase all your settings, do this as follows:

Turn off the RIMO 2000, then press and hold the HANDDIM 7 key while turning the RIMO 2000 back on

You are then back to the factory setting.

For information about the sale:

www.rimo.nl or mail to info@rimo.nl or else call 0031(0)6-22818029

Address : Zonnewijzer 28, 3962 HT in Wijk bij Duurstede

For information about possible malfunctions and repairs: www.beckers-pcs.nl or mail to jgabeckers@home.nl or else call 0031-(0)464110544

Address : Schoutenstraat 20, 6151 GS Munstergeleen Holland